

## Mini Hi-Fi System



### **Need help? Call us!**

*Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!*

**CALL US BEFORE YOU CONSIDER  
RETURNING THE PRODUCT!**

**1-800-531-0039**

**or**

**Visit us on the web at [www.philips.com](http://www.philips.com)**



# PHILIPS

## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

## CAUTION





***Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.***

## ATENCIÓN

***El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.***

***This system complies with the FCC rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:***

- This device may not cause harmful interference, and***
- This device must accept any interference received, including interference that may cause undesired operation.***

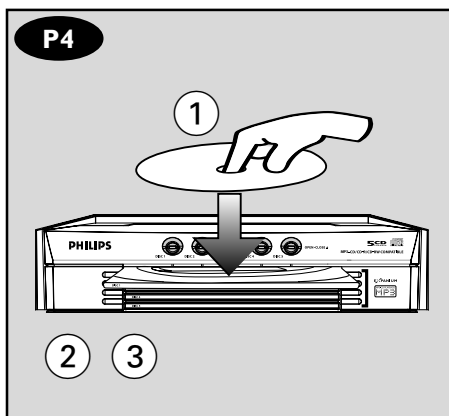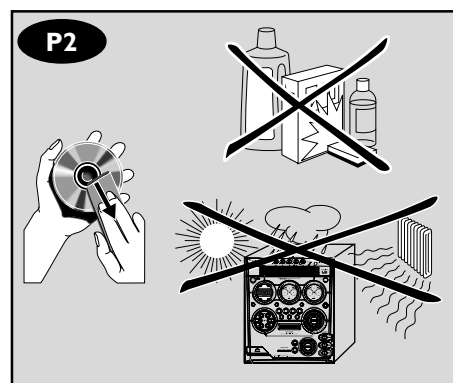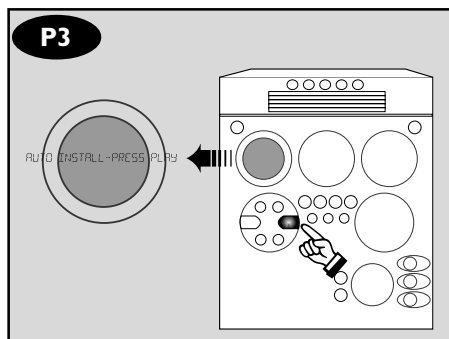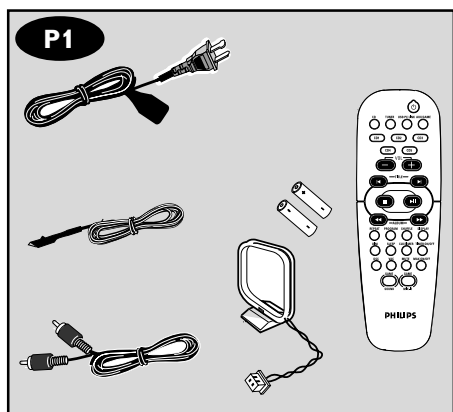

# Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

## Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

## Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

## Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these  
*safety* symbols



This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.



# PHILIPS

## ***Congratulations on your purchase, and welcome to the “family!”***

### **Dear Philips product owner:**

Thank you for your confidence in Philips. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Philips “family,” you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome – and thanks for investing in a Philips product.

Sincerely,

Lawrence J. Blanford  
President and Chief Executive Officer

 
**P.S. Remember, to get the most from your Philips product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.


8. Do not install the system near any heat sources  
such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug.



A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, **+** and **-** as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

**EL 6475-E004: 02/8**

## WARNING

To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus.

**Class II equipment symbol**



This symbol indicates that the unit has a double insulation system

English ..... 8

Français ..... 30

Español ..... 52

English

Français

Español

## General Information

|                                   |   |
|-----------------------------------|---|
| Supplied accessories .....        | 9 |
| Environmental information .....   | 9 |
| Care and safety information ..... | 9 |

## Functional Overview

|  |       |
|--|-------|
| Main unit and remote control .....                         | 10–11 |
| Control buttons available on the remote control only ..... | 11    |

## Connections

|   |    |
|---|----|
| Step 1: Connecting FM/AM antennas .....                   | 13 |
| Step 2: Connecting the speakers .....                     | 13 |
| Step 3: Connecting to game console .....                  | 13 |
| Step 4: Connecting the AC power cord .....                | 13 |
| Step 5: Inserting batteries into the remote control ..... | 14 |
| Using the remote control to operate the system .....      | 14 |

## Gameport Operations

|                              |    |
|------------------------------|----|
| About Gameport .....         | 15 |
| Preparation before use ..... | 15 |
| Starting operation .....     | 15 |

## Basic Operations

|  |    |
|--|----|
| Switching on/off .....                       | 16 |
| Switching to active mode .....               | 16 |
| Switching to eco power standby mode .....    | 16 |
| Switching to standby mode (view clock) ..... | 16 |
| Demonstration mode .....                     | 16 |
| Setting the clock .....                      | 16 |
| Dimming system's display screen .....        | 17 |
| Volume control .....                         | 17 |
| Sound control .....                          | 17 |
| MAX sound .....                              | 17 |
| Digital sound control .....                  | 17 |
| Dynamic bass boost .....                     | 17 |

## Disc Operations

|                                   |    |
|-----------------------------------|----|
| Playable discs .....              | 18 |
| Loading discs .....               | 18 |
| Basic playback controls .....     | 18 |
| Playing an MP3 disc .....         | 19 |
| Repeat and shuffle .....          | 19 |
| Repeat play .....                 | 19 |
| Random play .....                 | 19 |
| Programming the disc tracks ..... | 20 |
| Checking the programme .....      | 20 |
| Clearing the programme .....      | 20 |

## Tuner Operations

|  |    |
|--|----|
| Tuning to radio stations .....         | 21 |
| Presetting radio stations .....        | 21 |
| Using the plug and play .....          | 21 |
| Automatic presetting .....             | 21 |
| Manual presetting .....                | 21 |
| Selecting a preset radio station ..... | 21 |
| Deleting a preset radio station .....  | 21 |

## Timer Operations

|   |    |
|---|----|
| Setting the timer .....                 | 22 |
| Activating/Deactivating the timer ..... | 22 |
| Setting the sleep timer .....           | 23 |

## Other Connection

|                                       |    |
|---------------------------------------|----|
| Listening to an external source ..... | 23 |
|---------------------------------------|----|

## Specifications

## Troubleshooting

**Refer to the type plate on the rear of the system for identification and supply ratings.**

---

## **Supplied accessories** (page 3 – P1)

- Remote control and two AA batteries.
- AM loop antenna
- FM wire antenna
- Video cinch cable (yellow)
- AC power cord

---

## **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

---

## **Care and safety information**

(page 3 – P2)

### **Avoid high temperature, moisture, water and dust**

- Do not expose the system, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep the disc tray closed to avoid dust on the lens.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

### **Avoid condensation problem**

- The lens may cloud over when the system is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the system in the warm environment until the moisture evaporates.

### **Do not block the vents**

- In a cabinet, allows about 10cm (4 inches) of free space all around the system for adequate ventilation.

### **Care of disc**

- To clean a CD, wipe it in a straight line from the centre towards the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!
- Write only on the printed side of a CDR(W) and only with a soft felt-tipped pen.
- Handle the disc by its edge, do not touch the surface.

### **Care of the cabinet**

- Use soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### **Finding a suitable location**

- Place the system on a flat, hard, and stable surface.


### **Built-in safety circuit**

- Under extreme conditions, this system may switch to standby mode automatically. If this happens, let the system cool down before reusing it.

### **Power saving**

- This system is designed to use less than 1W of electricity when switched to Eco Power standby. Disconnect the AC power cord from the power outlet when not in use.

# Functional Overview

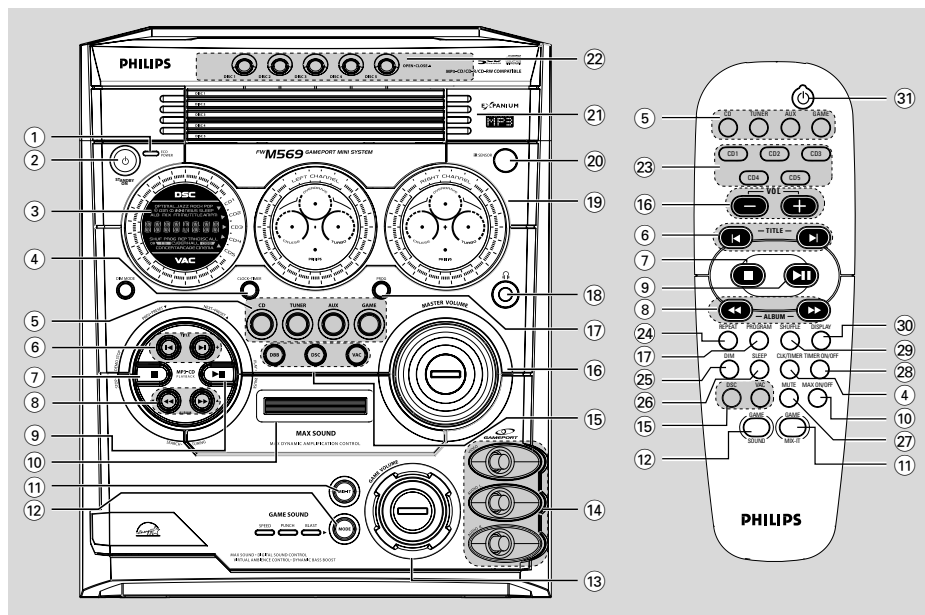

## Main unit and remote control

### ① ECO POWER indicator

- Lights up when the system is in the Eco Power standby mode.

### ② STANDBY ON

- Switches to the Eco Power standby mode or turns on the system.
- \*Switches to standby mode.

### ③ Display screen

### ④ CLOCK•TIMER (CLK/TIMER)

- \*Enters clock or timer setting mode.

### ⑤ CD / TUNER/ AUX•GAME

- Selects the relevant active mode.
- CD: toggles between DISC 1~5.
- TUNER: toggles between FM and AM band.
- AUX•GAME: toggles between AUX and GAMEPORT mode.

### ⑥ PREV•PRESET ▼ (TITLE -) (◀) NEXT•PRESET ▲ (TITLE +) (▶)

- CD: selects a track or selects a title from MP3 disc.
- TUNER: selects a preset radio station.
- CLOCK: sets the minutes.

### ⑦ STOP•DEMO STOP ■

- Exits an operation.
- CD: stops playback or clears a programme.
- TUNER: \*erases a preset radio station. (only on the main unit)
- \*Turns on/off the demonstration mode.

### ⑧ SEARCH•TUNING (ALBUM/PLAYLIST) ▼▲ (◀▶▶▶)

- CD: \*searches backward/forward or selects an album from MP3 disc.
- TUNER: tunes the radio frequency up/down.
- CLOCK: sets the hours.

\* = Press and hold the button for more than two seconds.

## 9 PLAY•PAUSE ► II

- CD: starts/pauses playback.  
(only on the main unit)
- TUNER: \*enters Plug & Play mode and/or starts preset radio station installation.

## 10 MAX SOUND (MAX ON/OFF)

- Turns on/off the optimal mix of various sound features.

## 11 MIX IT (GAME MIX IT)

- Mixes the game sound with your favorite music from one of these music sources (CD, TUNER or AUX).

## 12 MODE (GAME SOUND)

- Selects different type of equaliser setting for Gameport (SPEED, PUNCH or BLAST).

## 13 GAME VOLUME

- Adjusts the game's output volume level.

## 14 VIDEO

- Use a video cable to connect to your game console's video output.

### AUDIO L. / AUDIO R.

- Use an audio cable to connect to your game console's left/right audio output.

## 15 DBB

- Selects different type of bass boost level settings (DBB 1, DBB 2, DBB 3 or DBB OFF).

### DSC/PRESET

- Selects different type of preset sound equaliser settings (OPTIMAL, JAZZ, ROCK or POP).

### VAC/REVERB

- Selects different type of ambience-based equaliser settings (HALL, CINEMA, CONCERT, CYBER or ARCADE).

## 16 MASTER VOLUME (VOL + -)

- Adjusts the volume level.

## 17 PROG (PROGRAM)

- CD: starts or confirms tracks programming.
- TUNER: starts \*automatic/manual preset programming.
- CLOCK: selects 12- or 24-hour clock display.

## 18

- Plug in the headphones jack. The speakers output will be cancelled.

## 19 VU meters

- Indicates signal strength of left/right channel.

## 20 IR SENSOR

- Point the remote control towards this sensor.

## 21 Disc trays (1~5)

## 22 OPEN•CLOSE ▲ (DISC 1~5)

- Opens/closes the respective disc tray.

## Control buttons available on the remote control only

## 23 CD 1~5

- Selects a disc tray to playback.

## 24 REPEAT

- Repeats a track/disc/all programmed tracks.

## 25 DIM

- Turns on/off the dim mode.

## 26 SLEEP

- Sets the sleep timer function.

## 27 MUTE

- Mutes or restores the volume.

## 28 TIMER ON/OFF

- Turns on/off the timer function.

## 29 SHUFFLE

- Turns on/off the random play mode.

## 30 DISPLAY


- Displays the album and title name for MP3 disc.

## 31

- Switches to Eco Power standby mode.
- \*Switches to standby mode.

\* = Press and hold the button for more than two seconds.

# Connections

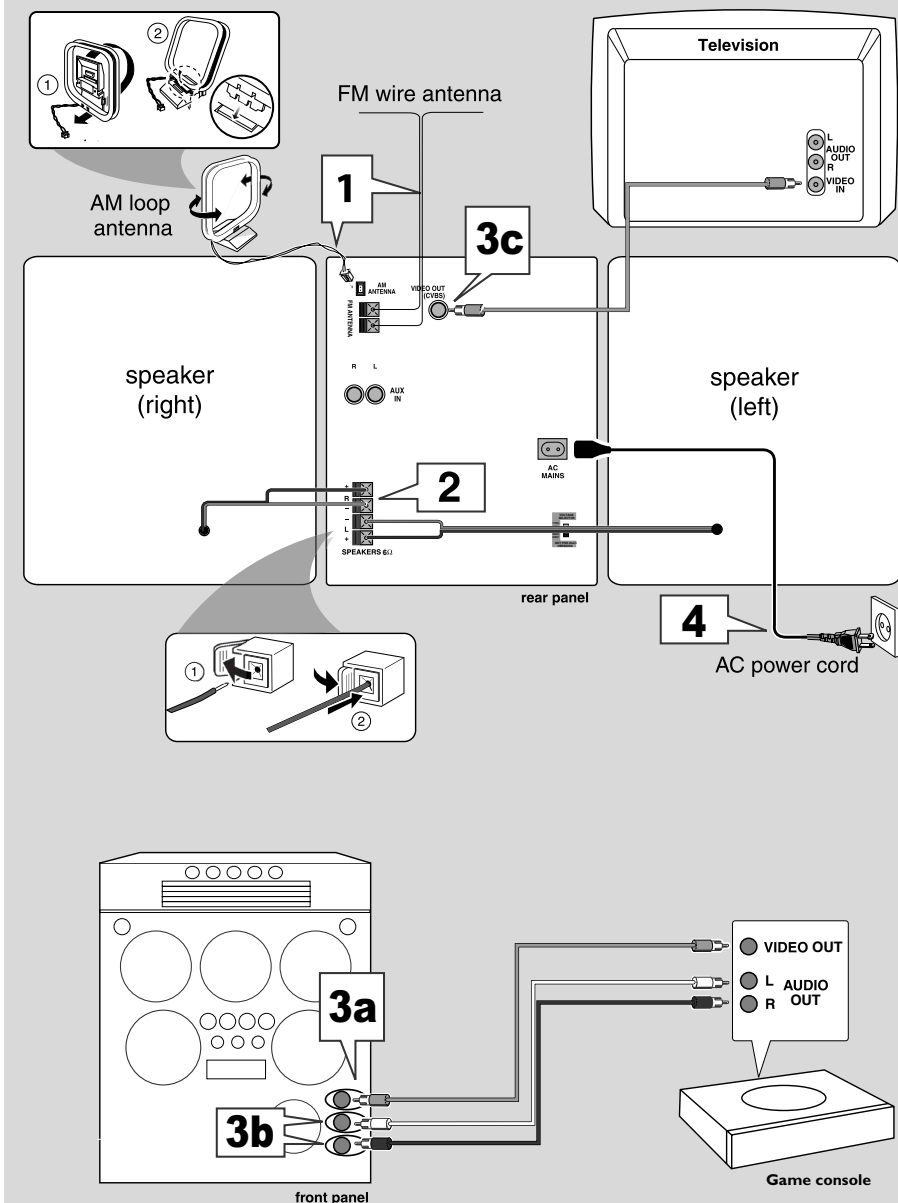

## Warning!

- Use only the supplied speakers. The combination of the main unit and speakers provides the best sound. Using other speakers can damage the unit and sound quality will be negatively affected.
- Never make or change connections with the power switched on.
- Connect the AC power cord to the power outlet only after you have finished hooking up everything.
- To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

## Step 1: Connecting FM/AM antennas

- Place the AM loop antenna on a shelf or attach it to a stand or wall.
- Extend the FM antenna and fix its ends to the wall.
- Adjust the position of the antennas for optimal reception.
- Position the antennas as far as possible from a TV, VCR or other radiation source to prevent unwanted noise.
- For better FM stereo reception, connect external FM antenna.

## Step 2: Connecting the speakers

Connect the speaker wires to the SPEAKERS terminals, right speaker to "R" and left speaker to "L", colored (marked) wire to "+" and black (unmarked) wire to "-". Fully insert the stripped portion of the speaker wire into the terminal as shown on page 12.

### Notes:

- Ensure that the speaker cables are correctly connected. Improper connections may damage the system due to short-circuit.
- Do not connect more than one speaker to any one pair of +/- speaker terminals.

## Step 3: Connecting to game console

### IMPORTANT!

Gameport inputs are solely for game console only.

- a. Use the game console's video cable (not supplied) to connect its video output to the GAMEPORT-VIDEO terminal.
- b. Use the game console's audio cables (not supplied) to connect its audio outputs to the GAMEPORT-AUDIO L. / AUDIO R. terminals.
- c. Use the video cable (yellow) to connect the VIDEO OUT terminal to the video input on the TV for viewing.

### Notes:


- On the TV, the Video Input jack is usually yellow and might be labeled A/V In, CVBS, Composite or Baseband.
- To avoid magnetic interference, do not position the front speakers too close to your TV.

## Step 4: Connecting the AC power cord

"AUTO INSTALL - PRESS PLAY" may appear on the display panel when the AC power cord is plugged into the power outlet for the first time. Press ►|| on the main unit to store all available radio stations (page 3 - P3) or press ■ to exit (refer to "Tuner Operations").

# Connections

## Step 5: Inserting batteries into the remote control

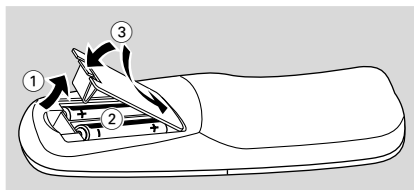

- ① Open the battery compartment cover.
- ② Insert two batteries type R06 or AA, following the indications (+ -) inside the compartment.
- ③ Close the cover.

## Using the remote control to operate the system

- ① Aim the remote control directly at the remote sensor (IR) on the main unit.
- ② Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD,TUNER).
- ③ Then select the desired function (for example ► II, ◀, ▶).

### CAUTION!


- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

# Gameport Operations

## About Gameport

Gameport allows you to connect your game console to this mini system which enables you to enjoy a total game immersion experience through powerful sound output.

## Preparation before use

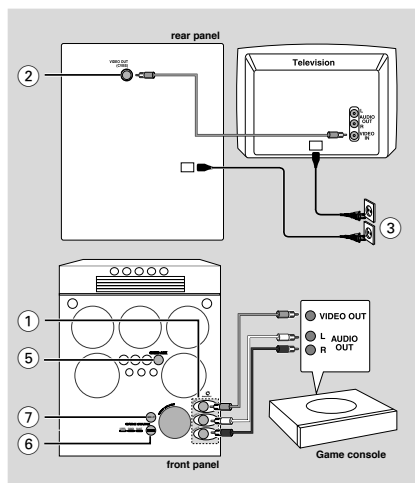

- ① Connect your game console's video and audio output to the GAMEPORT video and audio inputs respectively (refer to "Connections - Connecting to game console").
- ② Connect your TV's video input to the **VIDEO OUT (CVBS)** on the rear panel.
- ③ Connect all the AC power cord to the power outlet.

## Starting operation

- ④ Turn on the TV and set to the correct video-in channel.  
The TV's video input channel may be called AUX(iliary) IN, AUDIO/VIDEO (AV) IN, EXT 1, etc. These channels are often near channel 00 on your TV. Or, your TV remote control may have a button or switch that chooses different video modes. See your TV manual for details.

- ⑤ Press **AUX-GAME** until "GAMEPORT" is display.
- ⑥ Press **MODE** (or **GAME SOUND** on remote) to select the type of sound setting that best suit the game : **SPEED**, **PUNCH**, **BLAST** or **OFF**.
- ⑦ If you like to mix your game sound to your favourite music, press **MIX-IT** to select the desired music source : **CD**, **TUNER**, **AUX** or **OFF**.  
 CD → "MIX-CD"  
 TUNER → "MIX-TU"  
 AUX → "MIX-AUX"  
 OFF → "MIX-OFF"

### Note:

To change the disc tray, you have to press **CD**, then press **CD 1~5** to select the desired disc tray.

- ⑧ If necessary, start playback of your chosen mixer source.
- ⑨ Start playing your favourite game.

### To adjust the game console's volume level

- Adjust **GAMEVOLUME**.

### Notes:

- You can only activate **GAMEVOLUME** and **MIX-IT** while in the game source mode.
- If your game console is switched on, the video image will always appear on the TV even though you are not in the gameport mode.

# Basic Operations

## Switching on/off

### Switching to active mode

- Press **CD, TUNER, or AUX**.

### Switching to the Eco Power standby mode

- Press **⏻**.
  - ECO POWER button lights up.
  - The display screen will go blank.

### Switching to standby mode (view clock)

- Press and hold **⏻**.
  - The clock is displayed.
  - While in the standby mode, pressing **CLOCK•TIMER** button will switch the system to the Eco Power standby mode.

#### Note:

— Before switching the system to the Eco Power standby or standby mode, make sure the demonstration mode has been deactivated.

## Demonstration mode

If the demonstration mode is active, whenever you switch the system to the Eco Power standby or standby mode, it will begin showing the various features offered by the system.

### To activate the demonstration


- In Eco Power standby/standby mode, press and hold **■** on the main unit until "**DEMO ON**" is displayed.

### To deactivate the demonstration

- Press and hold **■** on the main unit until "**DEMO OFF**" is displayed.

## Setting the clock

The clock can be set in either 12-hour or 24-hour mode ("11:59 **PM**" or "23:59" for example).

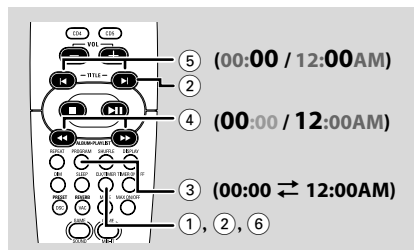

- 1 Press and hold **CLK/TIMER** (or **CLOCK•TIMER** on the main unit) until "SELECT CLOCK OR TIMER" is displayed.
- 2 Press **▶|** to change the display to "CLOCK" and press **CLK/TIMER (CLOCK•TIMER)** again to confirm.
- 3 Press **PROGRAM (PROG)** repeatedly to change between 12-hour and 24-hour clock mode.
- 4 Press **◀◀** or **▶▶** repeatedly to set the hour.
- 5 Press **◀** or **▶** repeatedly to set the minute.
- 6 Press **CLK/TIMER (CLOCK•TIMER)** to store the setting.
  - The clock will start working.

### To view the clock time in any active mode

- Press **CLK/TIMER (CLOCK•TIMER)** once.
  - The clock is displayed for a few seconds.

#### Notes:

— The clock setting will be erased when the system is disconnected from the power supply.  
— The system will exit clock setting mode if no button is pressed within 90 seconds.

## Dimming the system's display

You can select the desired brightness for the display panel.

- In any active mode, press **DIM** on the remote control or **DIM MODE** on the system repeatedly to turn on/off dim mode.  
→ **DIM** is shown, except for DIM OFF mode.

## Volume control

- Adjust **MASTER VOLUME** (or press **VOL + / -** on the remote control) to increase or decrease the sound level.  
→ "**VOL MIN**" is the minimum volume level and "**VOL MAX**" is the maximum volume level.

### To switch off the volume temporarily

- Press **MUTE** on the remote control.  
→ Playback will continue without sound and "**MUTE**" is displayed.  
→ To restore the volume, press **MUTE** again or increase the volume level.

## Sound control

MAX sound, DSC and VAC sound features cannot be activated at the same time. While in the game mode, all the sound control features are not available for selection, except DBB and Game Sound control.

### MAX sound

MAX sound provides the best mixture of various sound features (DSC, VAC for example).

- Press **MAX SOUND** (or **MAX ON/OFF** on the remote control).  
→ If activated, the MAX SOUND button lights up. All other sound effects (DSC, VAC or DBB) will be switched off automatically.

## Digital sound control

DSC provides a different type of preset sound equaliser setting.

- Press **DSC** repeatedly to select : OPTIMAL, JAZZ, ROCK or POP.

## Virtual ambience control

VAC provides a different type of environment-based equaliser setting.

- Press **VAC** repeatedly to select : HALL, CINEMA, CONCERT, CYBER or ARCADE.

## Dynamic bass boost

DBB enhances the bass response.

- Press **DBB** repeatedly to select : DBB 1, DBB 2, DBB 3 or DBB OFF.  
→ Some discs might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.

## Automatic DSC-DBB and VAC-DBB selection

The best DBB setting is generated automatically for each DSC, VAC or Game Sound selection. You can manually select the DBB setting that best suits your listening environment.

## IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the changer mechanism.
- Do not load more than one disc onto each tray.

## Playable discs

This system is able to play:

- All pre-recorded audio CDs
- All finalised audio CDR and audio CDRW discs
- MP3-CDs (CD-ROMs with MP3 tracks)



## Loading discs (page 3 - P4)

- ① Press **OPEN•CLOSE ▲ DISC 1** on top of the main unit to open disc tray 1.
- ② Load a disc with the label side facing up. For double-sided discs, load the side you want to play facing up.
- ③ Press **OPEN•CLOSE ▲ DISC 1** again to close the disc tray.  
→ "REBING" is displayed. The selected disc tray, total number of tracks and the playing time will appear on the display.
- ④ Repeat **steps 1~3** for loading discs into the **disc trays 2~5** by pressing the corresponding **OPEN•CLOSE ▲ DISC** button.

### Notes:

- To ensure good system performance, wait until the disc trays completely read the disc(s) before proceeding.
- Only one tray can be opened each time. If you open the second tray before closing the first tray, the first tray will automatically close before the second tray opens.

## Basic playback controls

### Load discs (page 3 - P4).

### To play all discs on the disc trays

- Press **▶II**  
OR

In stop mode, press **CD** to select a disc tray to begin, then press **▶II**

→ All the available discs will play once, then stop.

### To play the selected disc only

- Press one of the **CD 1~5** buttons on remote.  
→ The selected disc will play once, then stop.

### To select a desired track

- Press **◀** or **▶** repeatedly until the desired track is displayed.  
→ During random play (shuffle), pressing **◀** will not affect the current playback.

### To search for a particular passage during playback

- Press and hold **◀◀** or **▶▶** and release it when the desired passage is located.  
→ During searching, the volume will be reduced. For MP3 disc, the volume will be muted.

### To change discs without interrupting playback

- Press **OPEN•CLOSE ▲** of respective disc trays (refer to "Loading discs").  
For example, if currently disc tray 1 is playing, you can change the discs on disc trays 2~5.


### To interrupt playback

- Press **▶II**  
→ To resume normal playback, repeat the above.

### To stop playback

- Press **■**.  
→ If the system remains in the stop mode for 30 minutes, it will switch to the Eco Power standby mode.

## Playing an MP3 disc

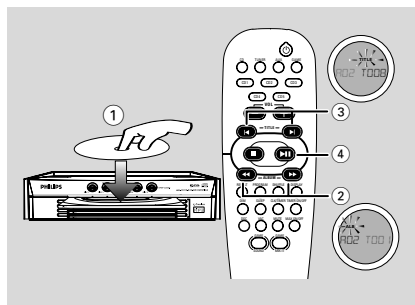

- ① Load an MP3 disc.  
→ The disc reading time may exceed 10 seconds due to the large number of songs compiled into one disc.  
→ "12:00 12:00" is displayed. 12 is the current album number and 00 is the current title number.
- ② Press ◀ / ▶ (ALBUM ▼ / ▲) to select a desired album.
- ③ Press ◀ / ▶ (TITLE - / +) to select a desired title.
- ④ Press ▶|| to start playback.
- During playback, press **DISPLAY** to show the album and title name.

### Supported MP3 disc formats:

- ISO9660, Joliet, UDF 1.5
- Maximum title number : 999 (depending on filename length)
- Maximum album number : 99
- Supported sampling frequencies : 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates : 32~256 (kbps), variable bitrates
- ID3 tags : V1.1, V2.2, V2.3, V2.4

## Repeat and shuffle

You can select and change the various play modes before or during playback.

### Repeat play

- ① Press **REPEAT** on the remote repeatedly to select :

|   |              |   |              |
|---|--------------|---|--------------|
| A | REP TRK      | D | PROG REP TRK |
| B | REP DISC     | E | PROG REP ALL |
| C | REP DISC ALL |   |              |

- A – to repeat playback of the current track.
  - B – to repeat playback of the current disc.
  - C – to repeat playback of all available discs (not available for this model).
  - D – to repeat playback of the current programmed track (only if the programme mode is active)
  - E – to repeat playback of all the programmed tracks (only if the programme mode is active)
- ② To resume normal playback, press **REPEAT** until "OFF" is displayed.

### Random play

- Press **SHUFFLE** on the remote to turn on/off the shuffle mode.  
→ If activated, **SHUF** is shown and the repeat mode (if any) will be cancelled.  
→ The random play will start from the current disc tray. Only after all the tracks in the active disc tray have been shuffled, then it will change to the next available disc tray.  
→ If programme mode is active, only the programmed tracks will be played in random order.

### Note:


- Pressing the **OPEN•CLOSE** button will cancel all repeat and shuffle modes.

## Programming the disc tracks

Programming tracks is possible when playback is stopped. Up to 99 tracks can be stored in the memory in any order.

### IMPORTANT!

**It is only possible to programme from the current selected disc tray.**

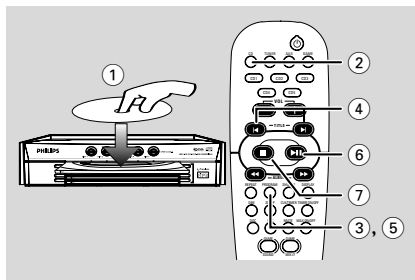

- ① Load the desired discs into the disc trays (refer to "Loading discs").
- ② Press **CD** or one of the **CD 1~5** buttons to select a disc.
- ③ Press **PROGRAM (PROG)** to start programming.  
→ **PROG** starts flashing.
- ④ Press **◀** or **▶** repeatedly to select the desired track.
- For MP3 discs, press **◀◀** / **▶▶** (**ALBUM ▼▲**) and **◀** / **▶** (**TITLE — / +**) to select the desired album and title for programming.
- ⑤ Press **PROGRAM (PROG)** to store.
- Repeat **steps 4–5** to select other tracks.  
→ If you attempt to programme more than 99 tracks, "PROGRAM FULL" is displayed.
- ⑥ To start programme play, press **▶||**
- ⑦ To stop playback or to end the programming, press **■** once.  
→ **PROG** stays and the programming mode remains active.

### Notes:

- If the total playing time reached 100 minutes or if one of the programmed tracks has a number greater than 30, "—:—" is displayed instead of the total playing time.
- The system will exit the programming mode if no button is pressed within 20 seconds.

## Checking the programme

- ① Stop playback and press **◀** or **▶** repeatedly.
- ② Press **■** to exit.  
**OR**  
Press **▶||** to start playback from the current programmed track

## Clearing the programme

- Stop playback, then press **■** to clear the program.  
**OR**  
Press the **OPEN•CLOSE ▲** button of the disc tray.  
→ **PROG** disappears and "PROGRAM CLEAR" is displayed.

### Note:

- The programme will be erased if the system is disconnected from the power supply or you switch to other source mode.

# Tuner Operations

## IMPORTANT!

**Make sure the FM and AM antennas are connected.**

## Tuning to radio stations

- ① Press **TUNER** to enter tuner mode. To select another waveband (FM or AM), press **TUNER** again.
- ② Press and hold ◀◀ or ▶▶ until the frequency indication starts to change, then release.
  - The system automatically tunes to the next strong signal radio reception.
  - ∞ lights up for FM stereo reception.

### For tuning to a weak signal station,

- Press ◀◀ or ▶▶ briefly and repeatedly until an optimal reception is found.

## Presetting radio stations

You can store up to 40 preset radio stations in the memory, starting from FM and followed by AM bands.

### Notes:

- The system will exit presetting mode if no button is pressed within 20 seconds.
- If no stereo frequency is detected during Plug and Play, "CHECK ANTENNA" is displayed.

### Using the plug and play (page 3 - P3)

Plug and Play allows you to store all available radio stations automatically.

- ① Connect the system to the power supply, "AUTO INSTALL - PRESS PLAY" is displayed.  
OR  
In Eco Power standby/standby mode, press and hold ▶▶ on the main unit until "AUTO INSTALL - PRESS PLAY" is displayed.
- ② Press ▶▶ on the main unit to start installation.
  - "INSTALL TUNER" is displayed.
  - All previously stored radio stations will be replaced.
  - Once completed, the last tuned radio station will be played.

→ Once completed, the last tuned radio station will be played.

## Automatic presetting

You can start the automatic presetting from a selected preset number.

- ① In tuner mode, press ◀ or ▶ to select a preset number.
- ② Press and hold **PROGRAM (PROG)** until "AUTO" is displayed.
  - If a radio station has been stored in one of the presets, it will not be stored again under another preset number.
  - If no preset number is selected, automatic preset will begin from preset (1) and all your former presets will be overridden.

## Manual presetting

You can choose to store only the favorite radio stations.

- ① Tune to your desired radio station (refer to "Tuning to radio stations").
  - ② Press **PROGRAM (PROG)**.
    - The preset number starts flashing. If you want to store the radio station in another preset number, press ◀ or ▶.
  - ③ Press **PROGRAM (PROG)** again to store.
- Repeat **steps 1–3** to store other radio stations.

## Selecting a preset radio station

- In the tuner mode, press ◀ or ▶.
  - The preset number, radio frequency, and waveband are displayed.

## Deleting a preset radio station

- Press and hold ■ until "PRESET DELETE" is displayed.
  - The current preset radio station will be deleted.
  - All other preset radio stations with higher numbers are decreased by one.


# Timer Operations

## Setting the timer

The system can switch on to the CD or TUNER mode automatically at a preset time, serving as an alarm to wake you up.

### IMPORTANT!

- Before setting the timer, ensure that the clock is set correctly.
- The volume of the timer will increase gradually to the last tuned volume level. If the last tuned volume level is too low, the set will then increase to a predetermined minimum audible level.

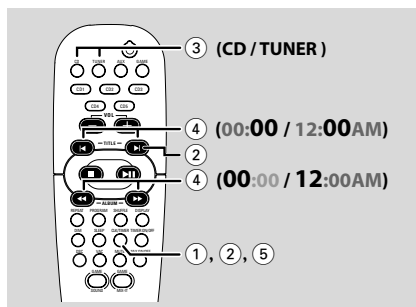

- ① Press and hold **CLK/TIMER** (or **CLOCK•TIMER** on main unit) until "SELECT CLOCK OR TIMER" is displayed.
- ② Press **▶|** to change the display to "TIMER" and press **CLK/TIMER** again to confirm.
- ③ Press **CD** or **TUNER** to select the wake-up source.  
CD → "CD XX:XX"  
TUNER → "TUN XX:XX"
- ④ Press **◀◀** or **▶▶** (for hours) and **◀** or **▶** (for minutes) repeatedly to set the wake-up time.
- ⑤ Press **CLK/TIMER** to store the setting.  
→ The timer will always be switched on once it has been set.  
→ icon remains on the display. It indicates the timer is activated.

- At the preset time, the selected sound source will be played for 30 minutes before it switches to **Eco Power standby mode** (if no button is pressed within the time frame).  
→ **CD** – playing the first track of the last selected disc. If the last selected disc tray is empty, it will switch to the next available disc. If all the disc trays are not available, it will switch to Tuner mode.  
→ **TUNER** – playing the last tuned radio station.

## Activating/deactivating the timer

- Press **TIMER ON/OFF** on the remote control to turn off the timer or turn on to the last setting again.  
→ If activated, the timer information will display for a few seconds, then the system resumes to the last active source or stays in standby mode.  
→ If deactivated, "OFF" is displayed.

### Notes:

- The system will exit timer setting mode if no button is pressed within 90 seconds.


## Timer Operations

### Setting the sleep timer

The sleep timer enables the system to switch to Eco Power standby mode automatically at a preset time.

- ① Press **SLEEP** repeatedly until it reaches the desired preset turn-off time.  
 → Following options are available (time in minutes):  
 15 → 30 → 45 → 60 → 90 → 120 → OFF → 15 ...  
 → **SLEEP** is shown, except for "OFF" mode.  
 → To view or change the setting, repeat the above.
- ② Before the system switches to Eco Power standby mode, a countdown of 10 seconds is displayed.  
 "SLEEP 10" → "SLEEP 9" ... → "SLEEP 1" → "SLEEP"


### Cancelling the sleep timer function

- Press **SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY ON**  button.

## Other Connection

### Listening to an external source

You can listen to the sound of the connected external device through your system's speakers.

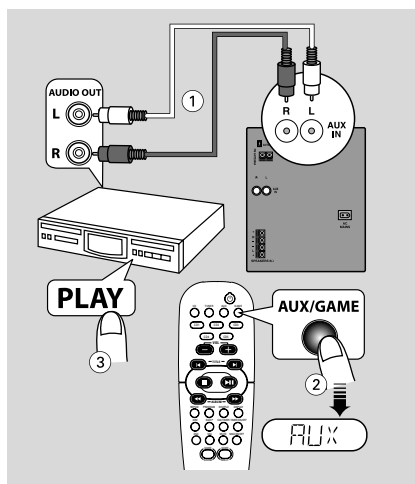

- ① Use the red/white audio cables to connect the system's **AUX IN (R/L)** terminals to the AUDIO OUT terminals on the other audio/visual device (such as a TV, VCR, Laser Disc player, DVD player or CD recorder)  
 → If the connected device has only a single audio out terminal, connect it to the AUX IN left terminal. Alternatively, you can use a "single to double" cinch cable, but the output sounds still remain mono.
- ② Press **AUX/GAME** until "AUX" is displayed.
- ③ Press **PLAY** on the connected device to start playback.

#### Notes:

- All the sound control features (DSC, VAC for example) are available for selection.
- Always refer to the owner's manual of other equipment for complete connection and use details.

# Specifications

## AMPLIFIER

|                             |                              |
|-----------------------------|------------------------------|
| Output power .....          | 300 W total power            |
| .....                       | 2 x 120 W FTC <sup>(1)</sup> |
| .....                       | 2 x 150 W RMS <sup>(1)</sup> |
| Signal-to-noise ratio ..... | ≥ 62 dBA (IEC)               |
| Frequency response .....    | 63 – 16000 Hz, ≤-3 dB        |
| Input sensitivity           |                              |
| AUX In .....                | 640 mV                       |
| Gameport .....              | 310 mV                       |
| Output                      |                              |
| Speakers .....              | ≥ 4 Ω                        |
| Headphones .....            | 32 Ω – 1000 Ω                |

<sup>(1)</sup> (4 Ω, 60kHz-12.5kHz, 10% THD)

## DISC PLAYER

|                               |                      |
|-------------------------------|----------------------|
| Programmable tracks .....     | 99                   |
| Frequency response .....      | 50 – 18000 Hz, -3 dB |
| Signal-to-noise ratio .....   | ≥ 62 dBA             |
| Channel separation .....      | ≥ 35 dB (1 kHz)      |
| MPEG 1 Layer 3 (MP3-CD) ..... | MPEG AUDIO           |
| MP3-CD bit rate .....         | 32-256 kbps          |
| .....                         | (128 kbps advised)   |
| Sampling frequencies .....    | 32, 44.1, 48 kHz     |

## TUNER

|                         |                   |
|-------------------------|-------------------|
| FM wave range .....     | 87.5 – 108 MHz    |
| AM wave range .....     | 530 – 1700 kHz    |
| Number of presets ..... | 40                |
| Antenna                 |                   |
| FM .....                | 300 Ω dipole wire |
| AM .....                | Loop antenna      |

## SPEAKERS

|                           |                               |
|---------------------------|-------------------------------|
| System .....              | 3 way, Bass reflex            |
| Impedance .....           | 4 Ω                           |
| Woofer .....              | 1 x 6.5"                      |
| Tweeter .....             | 1 x 2" Ferro fluid cooled     |
| Dimensions (w x h x d) .. | 348 x 322 x 245(mm)           |
| .....                     | 13.7" x 12.68" x 9.65"(Inch)  |
| Weight .....              | 4.35 kg each/9.57 pounds each |

## GENERAL

|                           |                                |
|---------------------------|--------------------------------|
| Material/finish .....     | Polystyrene/Metal              |
| AC Power .....            | 120 V / 60 Hz                  |
| Power Consumption         |                                |
| Active .....              | 60 W                           |
| Standby .....             | < 25 W                         |
| Eco Power Standby .....   | < 1 W                          |
| Dimensions (w x h x d) .  | 265 x 322 x 390 (mm)           |
| .....                     | 10.43" x 12.68" x 15.35"(Inch) |
| Weight (without speakers) | 8.6 kg /18.92 pounds           |

**Specifications and external appearance are subject to change without notice.**

## WARNING

**Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.**

**If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.**

| Problem   | Solution   |
|---|--|
| <b>Radio reception is poor.</b>   | <ul style="list-style-type: none"> <li>✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.</li> <li>✓ Increase the distance between the system and your TV or VCR.</li> </ul>   |
| <b>"NO DISC" is displayed or the disc cannot be played.</b>                   | <ul style="list-style-type: none"> <li>✓ Insert a disc.</li> <li>✓ Load in the disc with the labeled side facing up.</li> <li>✓ Replace or clean the disc, see "Care and safety information".</li> <li>✓ Use a finalised CD-R(W) or a correct format disc.</li> </ul>  |
| <b>The system does not react when buttons are pressed.</b>                    | <ul style="list-style-type: none"> <li>✓ Remove and reconnect the AC power cord and switch on the system again.</li> </ul>   |
| <b>Sound cannot be heard or is of poor quality.</b>                           | <ul style="list-style-type: none"> <li>✓ Adjust the volume.</li> <li>✓ Disconnect the headphones.</li> <li>✓ Check that the speakers are connected correctly.</li> <li>✓ Check that the AC power cord is connected properly.</li> </ul>  |
| <b>The remote control does not function properly.</b>                         | <ul style="list-style-type: none"> <li>✓ Select the source (CD or TUNER, for example) before pressing the function button (▶  , ◀◀, ▶▶).</li> <li>✓ Reduce the distance between the remote control and the system.</li> <li>✓ Replace the battery.</li> <li>✓ Point the remote control directly toward the IR sensor.</li> </ul> |
| <b>The timer is not working.</b>  | <ul style="list-style-type: none"> <li>✓ Set the clock correctly.</li> <li>✓ Press TIMER ON/OFF to switch on the timer.</li> </ul>   |
| <b>The system displays features automatically and buttons start flashing.</b> | <ul style="list-style-type: none"> <li>✓ Press and hold DEMO STOP on the main unit to switch off the demonstration mode.</li> </ul>  |

Refer to the FAQ (Frequently Asked Questions) on the supplied CD-ROM or visit our website "[www.audio.philips.com](http://www.audio.philips.com)" for latest update on FAQ.

**RENEWED  
90 DAY  
LIMITED WARRANTY**